



| POS | DESCRIPTION |
|-------|-------------------------------|
| 1 | Central block |
| 2 | Air exhaust cover |
| 3 | Pump casing |
| 4 | Discharge & suction manifolds |
| 5 | Ball seats |
| 5a+5b | Balls seats packing |
| 7 | Silencer |
| 8 | Internal cap |
| 9 | Washer |
| 10 | External cap |
| 11 | Balls |
| 12 | Internal diaphragm |
| 13 | External diaphragm |
| 14 | Spacer |
| 15 | Gasket |
| 16 | Stop ring |
| 17 | Ball seat packing |
| 18 | Manifold cap packing |
| 6+19 | Air control unit |
| 20 | Screw |
| 22 | Air inlet cover |
| 24 | O-ring |
| 26 | Pump casing screw |
| 27 | Manifold cap |
| 28 | Manifold screw |
| 29 | Flat washer |
| 30 | O-ring |
| 31 | Packing oring |