




115 Aluminum spare part list pump

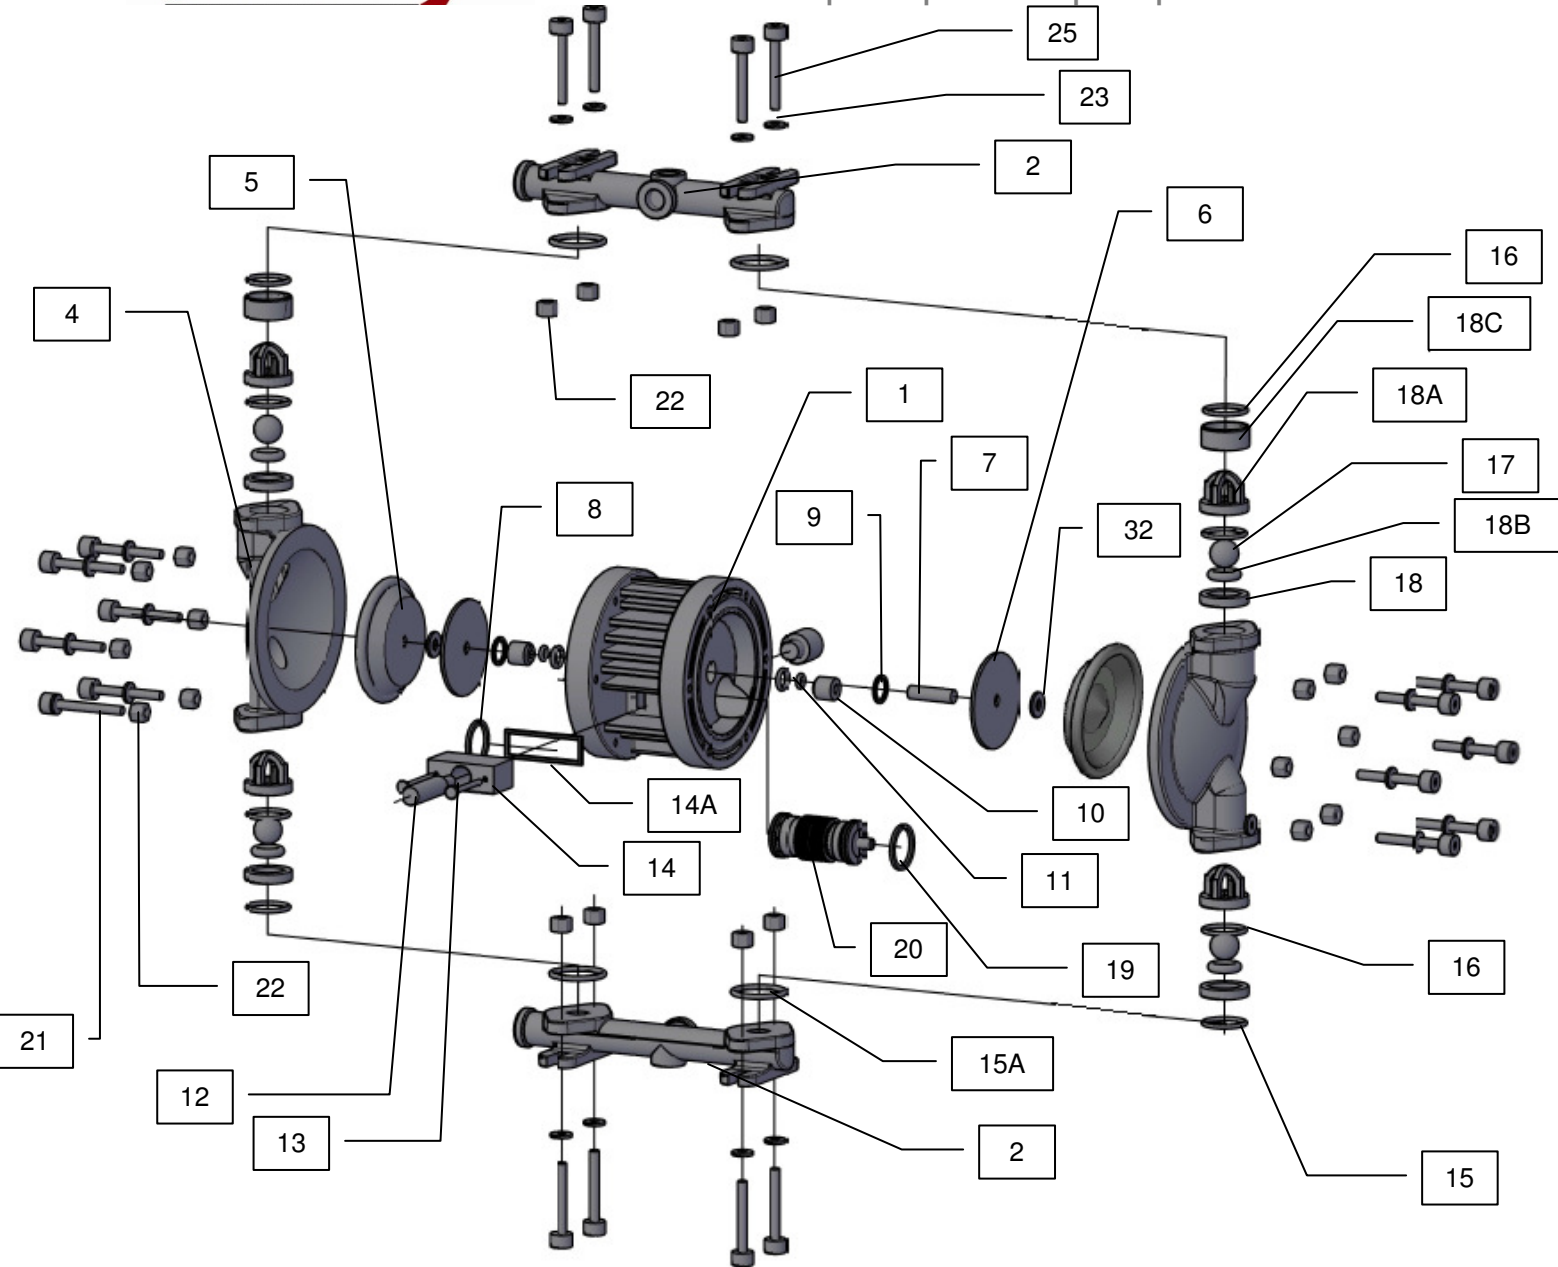

POS	DESCRIPTION	QTY	POS	DESCRIPTION	QTY
01	CENTRAL BLOCK	1	16	VALVE SEAT ORING UP	6
02	MANIFOLD	2	17	VALVE BALL	4
04	PUMP HOUSING	2	18	BALL SEAT	4
05	DIAPHRAGMS	2	18A	BALL RUNNER CAGE	4
06	PISTON INNER	2	18B	BALL SEAT ORING	4
07	SHAFT	1	18C	BALL RUNNER SUPPORT	2
08	RETAINING RING SHAFT	2	19	RETAINING RING AIR VALVE	2
09	O-RING BEARING	2	20	AIR CONTROL VALVE	1
10	SHAFT BEARING	2	21	HOUSING PUMP SCREW	12
11	O-RING BEARING	2	22	BOLT	20
12	SILENCER	1	23	WASHER	20
13	AIR EXHAUST SCREW	2	25	SUCTION -DISCHARGE MANIFOLD SCREW	8
14	AIR EXHAUST COVER	1	29	AIR CONNECTION	1
14A	ORING SILENCER	1	32	SPACER	2
15	VALVE SEAT ORING DOWN	2			
15A	VALVE SEAT ORING DOWN	4			