


# ATLAS SBM / CBM 15 spare part list drawing

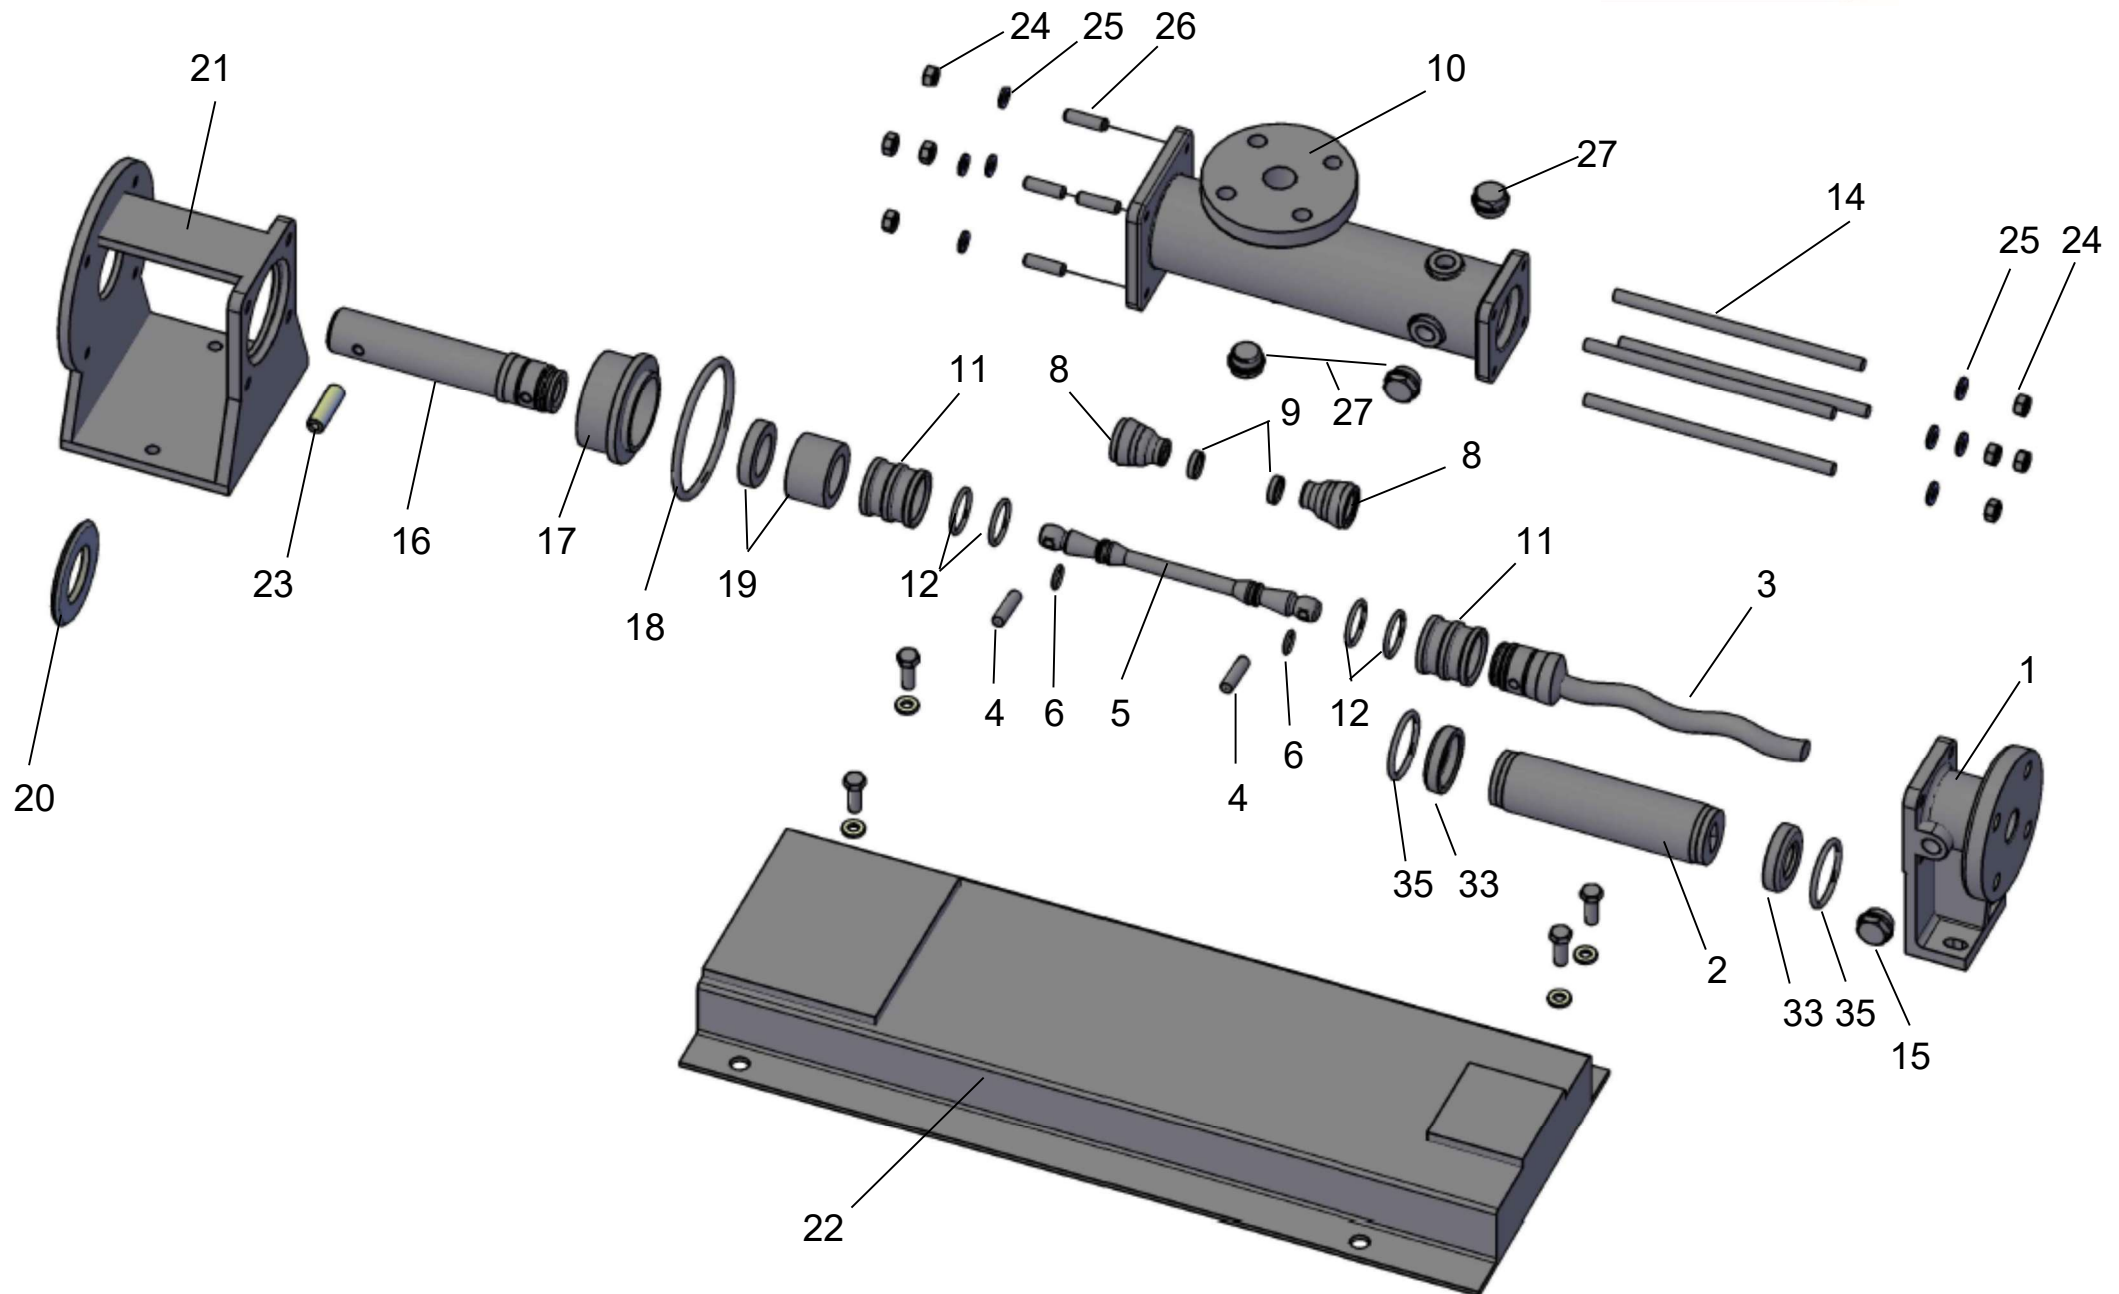

Pos	Description	Req. Qty
01	END COVER FLANGE	1
02	STATOR	1
03	ROTOR	1
04	COUPLING ROD PIN	2
05	COUPLING ROD	1
06	COUPLING ROD ORING	2
08	BOOT SEAL	2
09	BOOT SEAL RETAINING RING	2
10	PUMP HOUSING	1
11	PIN RETAINER	2
12	SHAFT + ROTOR ORING	4
14	TIE ROD	4
15	PLUG	1
16	STUB SHAFT	1

Pos	Description	Req. Qty
17	SEAL HOUSING	1
18	SEAL HOUSING ORING	1
19	MECHANICAL SEAL	1
20	PROTECTION COVER	1
21	BRACKET	1
22	BASE	1
23	SHAFT PIN	1
24	NUT	8
25	WASHER	8
26	STUDS	4
27	PLUG	3
33	STATOR SUPPORT RING	2
35	STATOR SUPPORT	2