


040 PP - PVDF spare part list pump

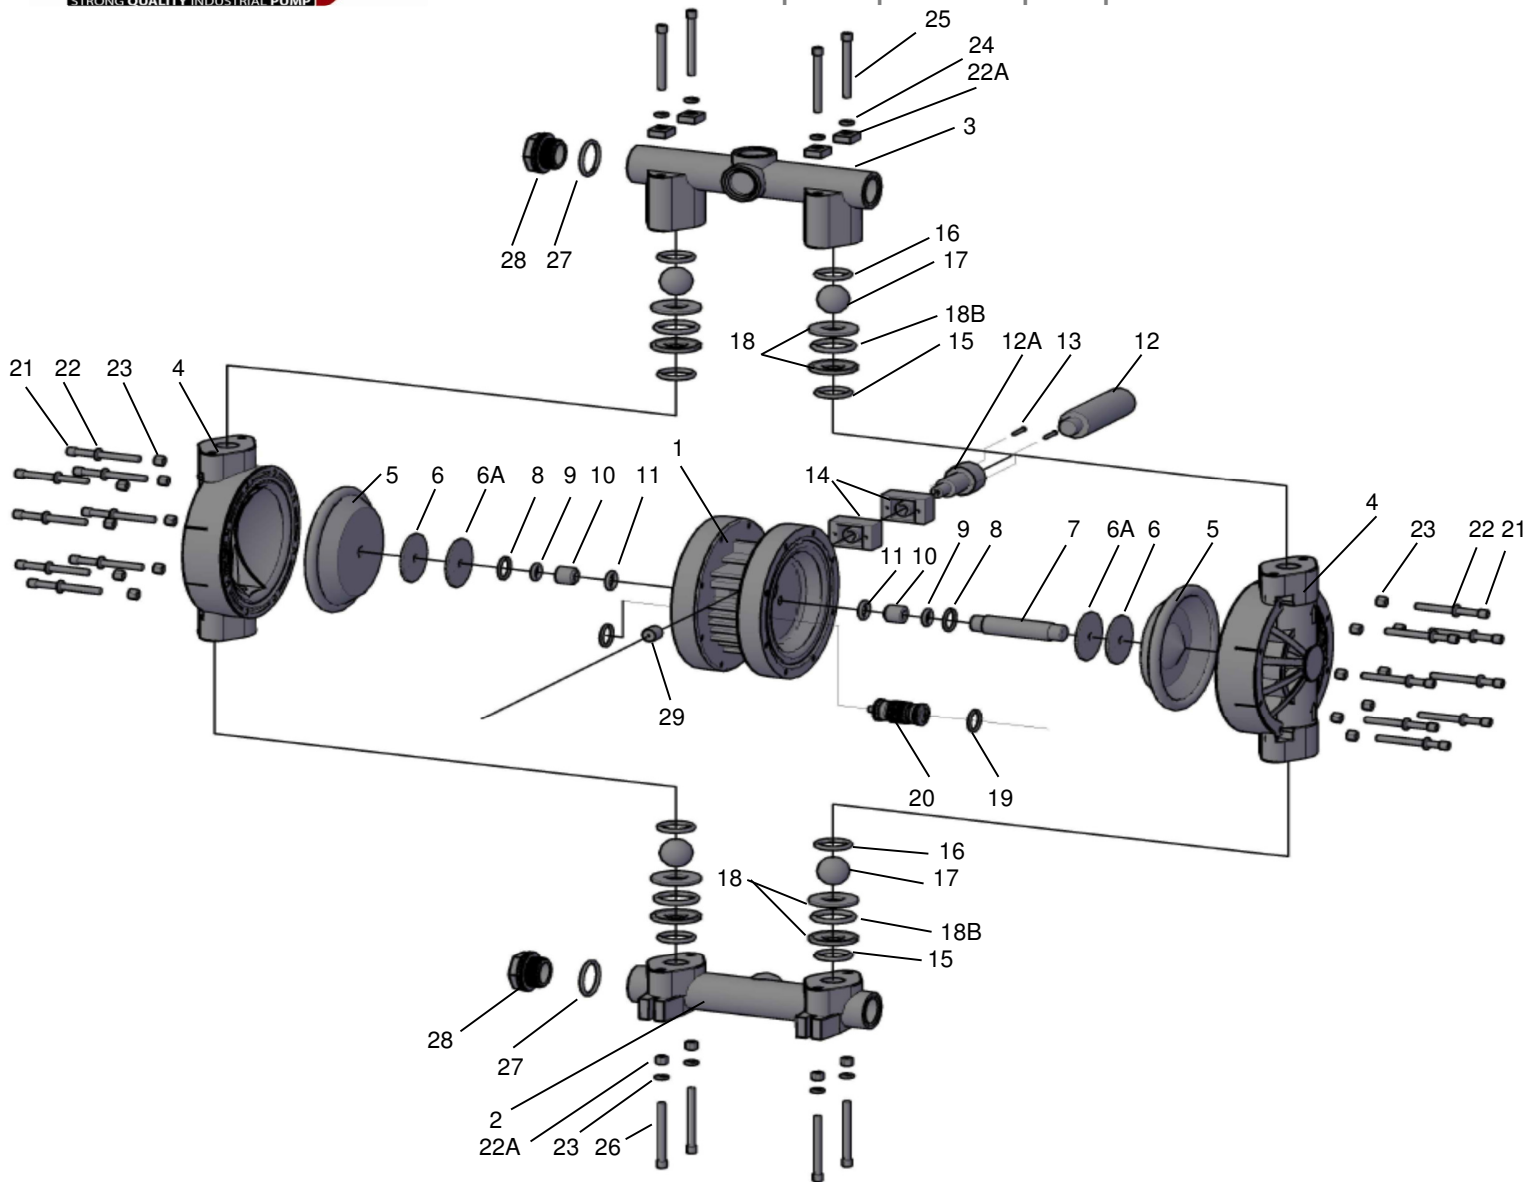

POS	DESCRIPTION	QTY	POS	DESCRIPTION	QTY
1	CENTRAL BLOCK	1	16	VALVE SEAT ORING UP	4
2	SUCTION MANIFOLD	1	17	VALVE BALL	4
3	DISCHARGE MANIFOLD	1	18	BALL SEAT	4
4	PUMP HOUSING	2	18B	BALL SEAT ORING	4
5	DIAPHRAGMS	2	19	RETAINING RING AIR VALVE	2
6	PISTON INNER	2	20	AIR CONTROL VALVE	1
6A	PISTON INNER SUPPORT	2	21	HOUSING PUMP SCREW	16
7	SHAFT	1	22	BOLT	16
8	RETAINING RING SHAFT	2	22A	SUCTION-DISCHARGE BOLT	8
9	O-RING BEARING	2	23	WASHER	20
10	SHAFT BEARING	2	24	WASHER	4
11	O-RING BEARING	2	25	DISCHARGE MANIFOLD SCREW	4
12	SILENCER	1	26	SUCTION MANIFOLD SCREW	4
12A	SUPPORT SILENCER	1	27	MANIFOLD CAP ORING	2
13	AIR EXHAUST SCREW	2	28	MANIFOLD CAP	2
14	AIR EXHAUST COVER	2	29	DRIVE AIR INLET	1
15	VALVE SEAT ORING	4			