# 120 Aluminum spare part list pump

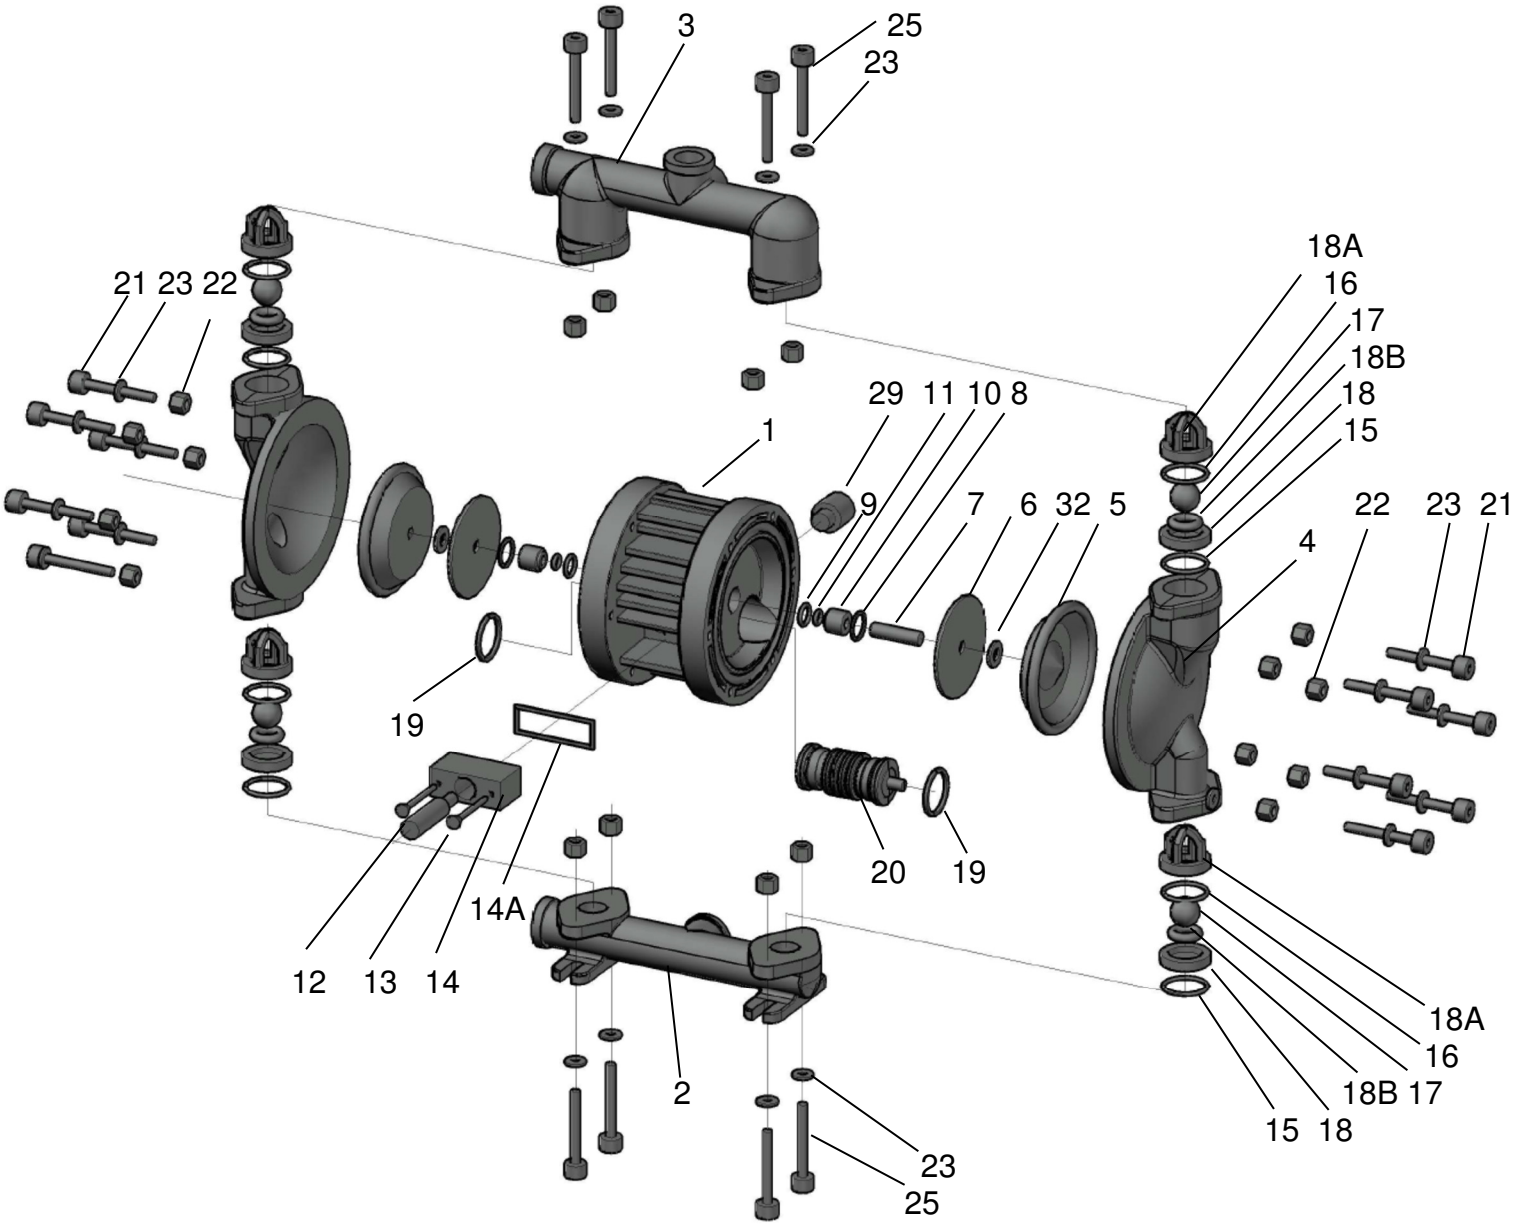


| POS | DESCRIPTION | QTY | | POS | DECRIPTION | QTY |
|---|---|---|---|---|---|---|
| 1 | CENTRAL BLOCK | 1 | | 15 | VALVE SEAT ORING | 4 |
| 2 | SUCTION MANIFOLD | 1 | | 16 | VALVE SEAT ORING | 4 |
| 3 | DISCHARGE MANIFOLD | 1 | | 17 | VALVE BALL | 4 |
| 4 | HOUSING | 2 | | 18 | BALL SEAT | 4 |
| 5 | DIAPHRAGMS | 2 | | 18A | BALL RUNNER CAGE | 4 |
| 6 | PISTON INNER | 2 | | 18B | BALL SEAT ORING | 4 |
| 7 | SHAFT | 1 | | 19 | RETAINING RING AIR VALVE | 2 |
| 8 | RETAINING RING SHAFT | 2 | | 20 | AIR CONTROL VALVE | 1 |
| 9 | O-RING BEARING | 2 | | 21 | HOUSING SCREW | 12 |
| 10 | SHAFT BEARING | 2 | | 22 | BOLT | 20 |
| 11 | O-RING BEARING | 2 | | 23 | WASHER | 20 |
| 12 | SILENCER | 1 | | 25 | MANIFOLD SCREW | 8 |
| 13 | AIR EXHAUST SCREW | 2 | | 29 | AIR CONNECTION | 1 |
| 14 | AIR EXHAUST COVER | 1 | | 32 | SPACER | 2 |
| 14A | ORING SILENCER | 1 | | | | |