125 Aluminium spare part list pump

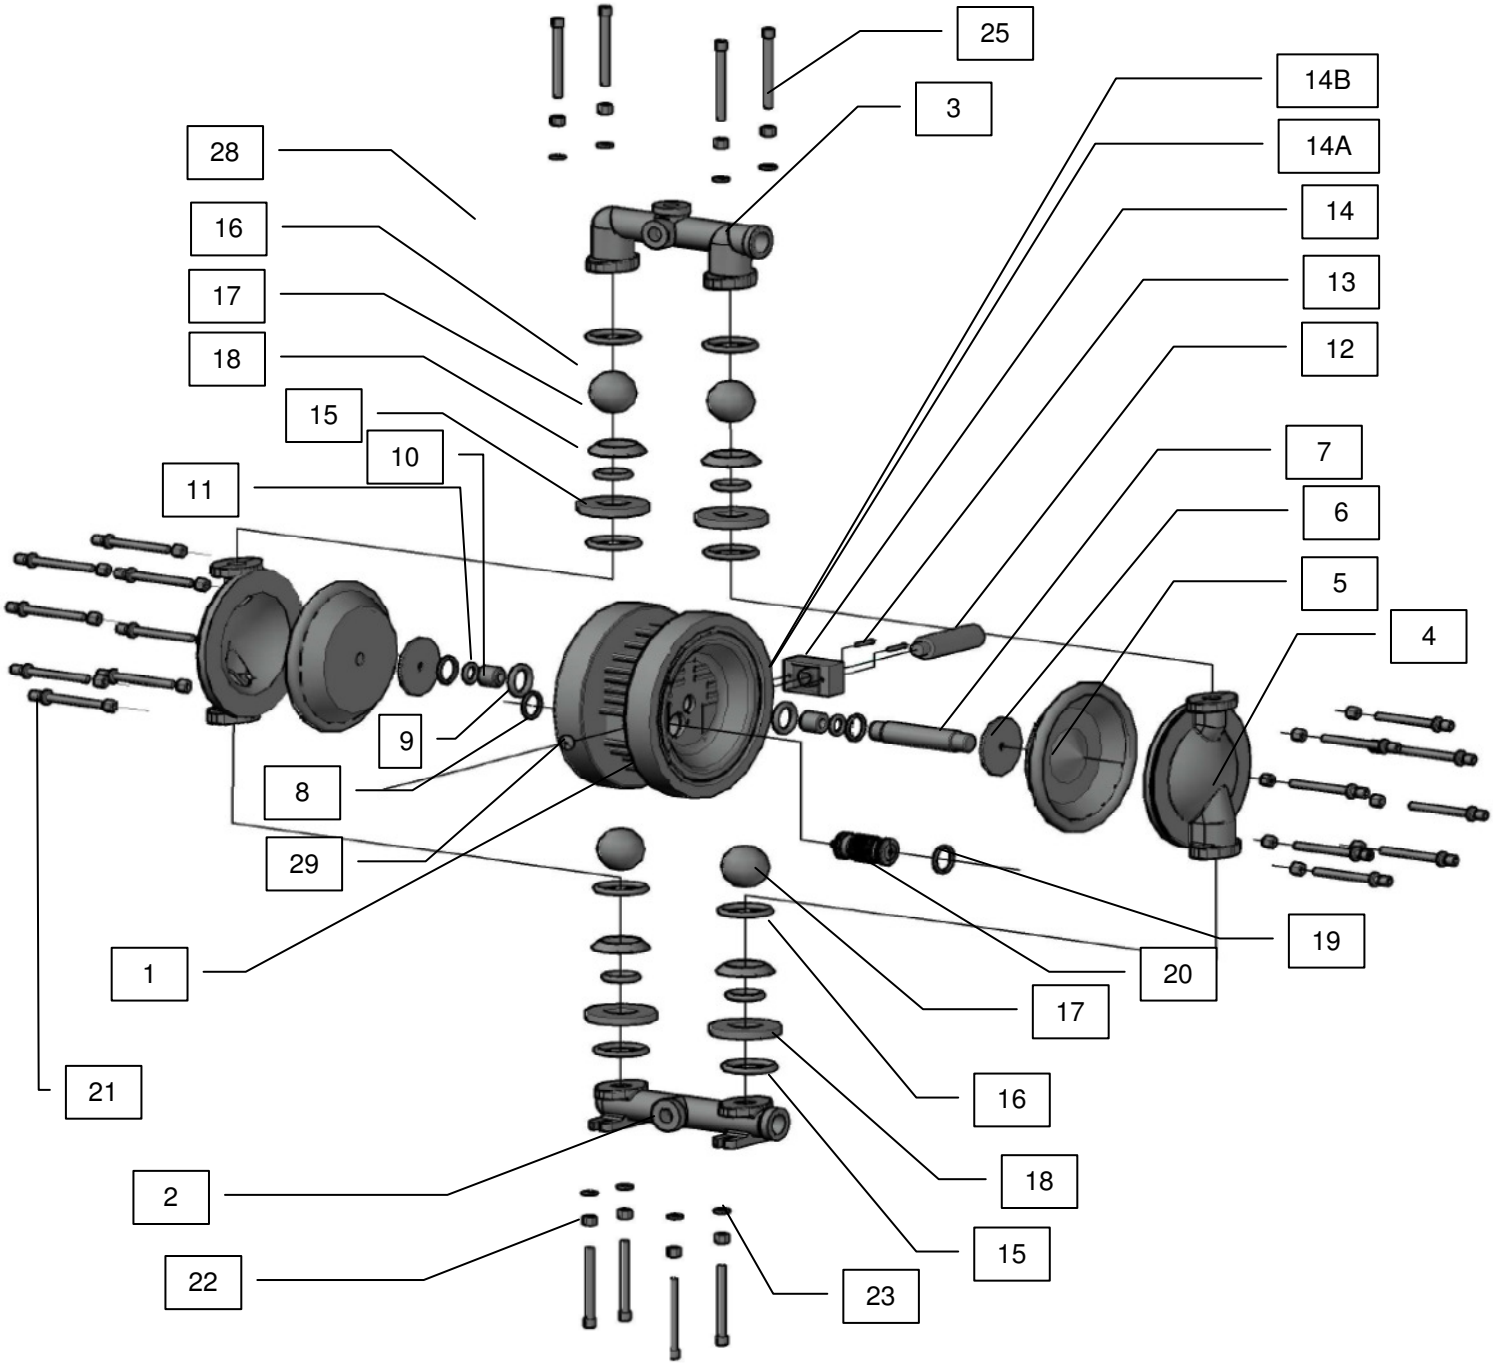

POS	DESCRIPTION	QTY		POS	DECRIPTION	QTY
01	CENTRAL BLOCK	2		14B	ORING SILENCER	2
02	SUCTION MANIFOLD	1		15	VALVE SEAT ORING DOWN	4
03	DISCHARGE MANIFOLD	1		16	VALVE SEAT ORING UP	4
04	PUMP HOUSING	2		17	VALVE BALL	4
05	DIAPHRAGMS	2		18	BALL SEAT	4
06	PISTON INNER	2		19	RETAINING RING AIR VALVE	2
07	SHAFT	1		20	AIR CONTROL VALVE	1
08	RETAINING RING SHAFT	2		21	HOUSING PUMP SCREW	16
09	O-RING BEARING	2		22	BOLT	24
10	SHAFT BEARING	2		23	WASHER	24
11	O-RING BEARING	2		25	MANIFOLD SCREW	8
12	SILENCER	1		29	DRIVE AIR INLET	1
13	AIR EXHAUST SCREW	2				
14	AIR EXHAUST COVER	1				
14A	ORING SILENCER	1				